


### Mounting to Dock-Boat-Pool Deck

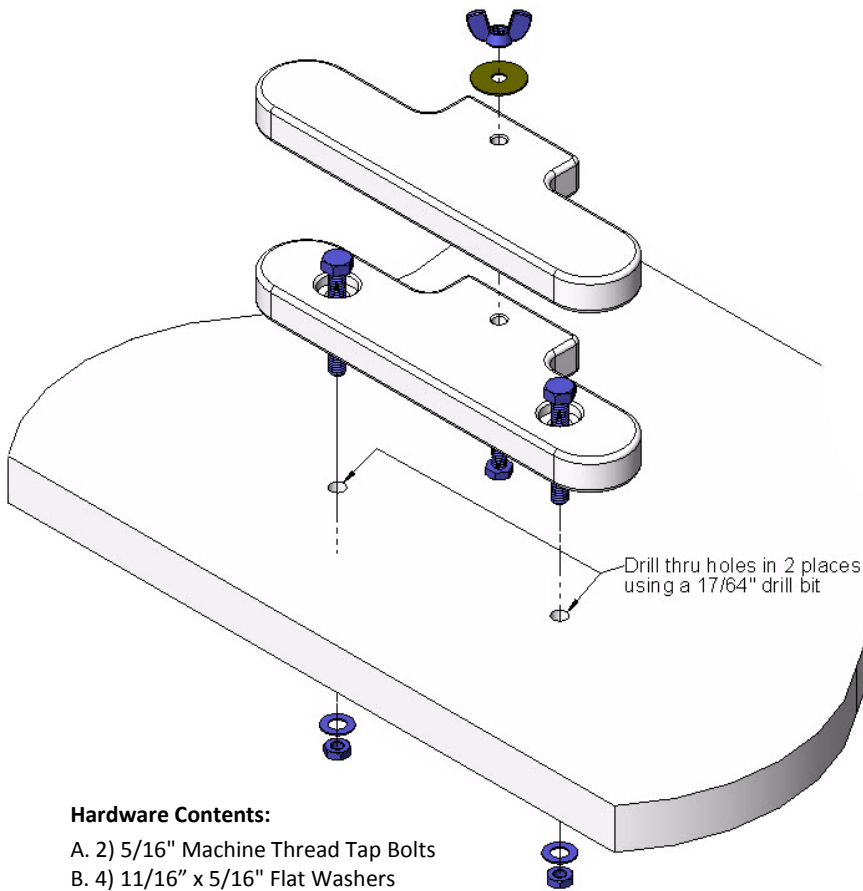

#### Hardware Contents:

- A. 2) 5/16" Machine Thread Tap Bolts
- B. 4) 11/16" x 5/16" Flat Washers
- C. 2) 5/16" Nuts
- D. 1) ¼-20 Machine Tap Bolt
- E. 1) ¼" Lock Washer
- F. 1) ¼-20 Wing Nut
- G. 1) ¼-20 Flat Washer

### Mounting Swivel Cleat

1. Remove hardware attached to the Swivel Cleat.
2. Position doggydocks so hinge is supported as shown in installation directions
3. Trace cleat cutout with fine point sharpie or pencil.
4. Place swivel cleat base over traced area and check measurement making sure it is 2.5"

### Securing doggydocks®

1. Place the swivel cleat in the closed position
2. Set doggydocks cleat cut out over swivel cleat.
3. Loosen wing nut and swivel the top part turn 180 degrees.
4. Tighten wing nut to secure doggydocks.

### IMPORTANT:

Before installing the mounting assembly base, make certain that the ¼" x 2.5" bolt and lock washer is seated properly  
Or the thumbscrew will not tighten properly.


### Note:

Depending on the type of surface installing on it may be necessary to use different bolts types.

### **Optional Hardware (Not Included)**

If underside of mounting platform is not accessible additional options below can also be used.

- Threaded Inserts for Plastic or Wood
- Simpson Strong-Tie SET 1.7KTA Anchoring Adhesive for Concrete
- Lag Bolts for Wood

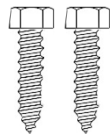

Lag Bolts



Threaded Inserts



SET 1.7KTA